

## Euro Duetto auto-clean 2 x 5 litre Daily cleaning procedure




Remove lid, place waste buckets under nozzles



Remove connectors with tubes attached. Place into containers. Disassemble, wash parts and containers. Reassemble tubes.



Fill cleaning buckets to level line with **hand hot water (around 50°C)**.

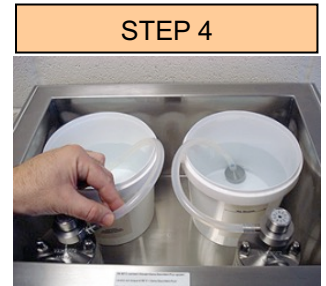

Place containers into machine and reconnect suction tubes




Press cleaning buttons once. Auto pre-rinsing begins (2 mins)



After cycle remove cream nozzles and place into container. Attach cleaning nozzles



Wash cream nozzles under hot water. Fill containers with **hand hot water (around 50C)**

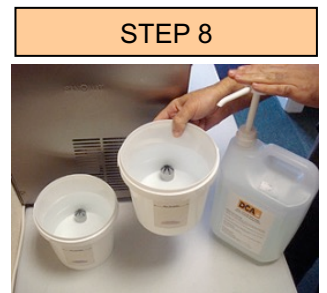

Add two full pumps of DCA auto-clean sanitiser



Place cleaning containers into machine



Press cleaning buttons once. Auto sanitising begins (2 mins)



Rinse containers and cream nozzles. Fill containers with **cold water**



Place cleaning containers into machine



Press cleaning buttons once. Auto final rinsing begins (2 mins)



After cycle remove cleaning nozzles. Re-attach cream nozzles. Remove cleaning buckets



Wipe all machine and local work surfaces clean.



Return cream containers to machine and replace lid