

Eurocream auto-clean 2L

Daily cleaning procedure

STEP 1



Remove lid, while lifting suction pipe & wipe clean.

STEP 2



Remove and wash cream container. Place waste bucket under nozzle.

STEP 3



Fill cleaning bucket to level line with **hand hot water (around 50°C)**.

STEP 4



Place cleaning bucket into machine and swing suction pipe down

STEP 5




Switch off refrigeration (**green** button). Press cleaning button once. Auto pre-rinsing begins (2 mins).

STEP 6



After cycle remove cream nozzle and place into cleaning bucket. Attach cleaning nozzle.

STEP 7

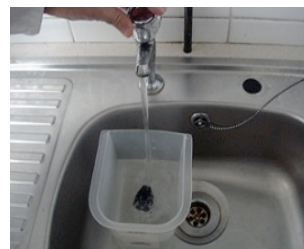

Wash cream nozzle under hot water. Fill cleaning bucket to level line with **hand hot water (around 50°C)**.

STEP 8



Add two full pumps of DCA Auto-Clean sanitiser

STEP 9




Place cleaning bucket into machine and swing suction pipe down

STEP 10



Press cleaning button once. Auto-final rinsing begins (2 mins)

STEP 11

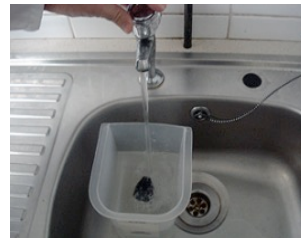

Rinse cleaning bucket and cream nozzle. Fill cleaning bucket to level line with **cold water**.

STEP 12



Place cleaning bucket into machine and swing suction pipe down

STEP 13



Press cleaning button once. Auto-sanitising begins (2 mins)

STEP 14



After cycle remove cleaning nozzle. Re-attach cream nozzle. Remove cleaning nozzle

STEP 15



Wipe all machine and local work surfaces clean.

STEP 16



Return cream container to machine. Replace lid. Switch on refrigeration (**green** button)